
# SNAPPER

# REAR ENGINE RIDER

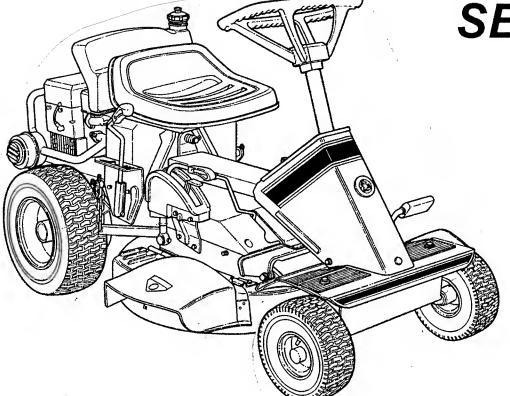


# SERIES 14


MODELS
250814B
250814BE
280914BE
281014BE
300914BE
301014BE
301214BE
331314BE
331414KVE

### **CONTENTS**


DESCRIPTION	PAGE(S)
WHEELS, TIRES	2-3
FRONT END, STEERING	4-5
MAIN CASE (REAR)	6-7
DIFFERENTIAL	8-9
CHAIN CASE ASSEMBLY	10-11
SMOOTH CLUTCH ASSEMBLY	12-13
CUTTING DECKS, DEFLECTORS	14-15
RAILS, LIFT ARMS	16-17
BELTS, BLADE BRAKES	18
BLADE STOP PEDALS	19
SPINDLE ASSEMBLY	
DRIVE DISC ASSEMBLY	21
FUEL TANK, OPERATORS SEAT	22
EXHAUST MUFFLERS	23
ELECTRICAL SYSTEM	24-25
THROTTLE CONTROLS	26
DECALS	27-29
ENGINES, ACCESSORIES	30
WARRANTY	
GALABRER	
SMAPPER®McDonough, GA.,	20052 11 0 4
En McDonough, GA.,	30233 U.S.A.

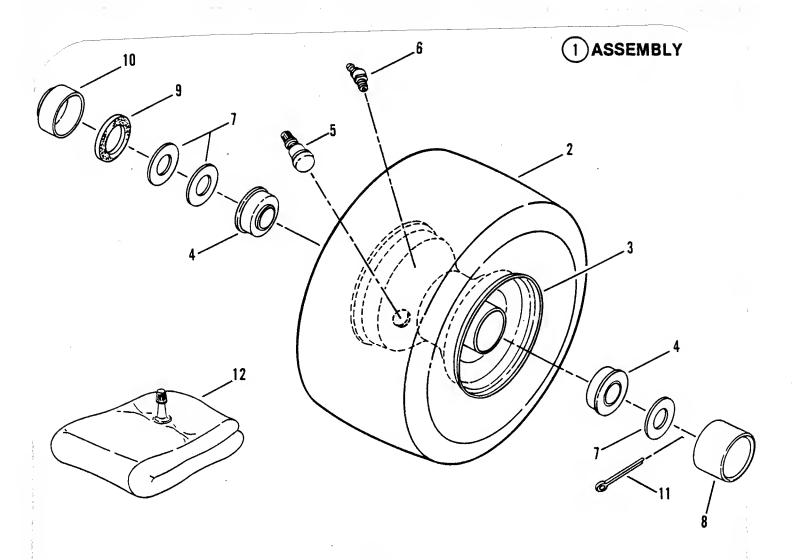


ITEM       PART NO.       DESCRIPTION         1       5-2268       ASSEMBLY, Front Tire & Rim (Complete) (Includes Items 2, 3, 4, 6, 12)         -       5-2267       ASSEMBLY, Front Tire & Rim (Includes Items 2 Thru 6)         2       2-3828       TIRE, Pneumatic 4.10/3.50 x 4         3       1-7146       RIM (For 4.10/3.50 x 4 Tire)         4       1-1807       BEARING, Ball         5       1-2234       VALVE, Air (Snap-in)         6       1-0138       FITTING Lube         7       1-0935       WASHER         8       1-1022       CAP, Hub         9       1-1032       SEAL, Felt         10       3-1038       CAP, Dust         11       9-0364       PIN, 5/32 x 1" Cotter Hair         12       1-0821       TUBE, Inner (For 4.10/3.50 x 4 Tire)			
(Includes Items 2, 3, 4, 6, 12)  - 5-2267 ASSEMBLY, Front Tire & Rim (Includes Items 2 Thru 6)  2 2-3828 TIRE, Pneumatic 4.10/3.50 x 4  3 1-7146 RIM (For 4.10/3.50 x 4 Tire)  4 1-1807 BEARING, Ball  5 1-2234 VALVE, Air (Snap-in)  6 1-0138 FITTING Lube  7 1-0935 WASHER  8 1-1022 CAP, Hub  9 1-1032 SEAL, Felt  10 3-1038 CAP, Dust  11 9-0364 PIN, 5/32 x 1" Cotter Hair	ITEM	PART NO.	DESCRIPTION
- 5-2267 ASSEMBLY, Front Tire & Rim (Includes Items 2 Thru 6) 2 2-3828 TIRE, Pneumatic 4.10/3.50 x 4 3 1-7146 RIM (For 4.10/3.50 x 4 Tire) 4 1-1807 BEARING, Ball 5 1-2234 VALVE, Air (Snap-in) 6 1-0138 FITTING Lube 7 1-0935 WASHER 8 1-1022 CAP, Hub 9 1-1032 SEAL, Felt 10 3-1038 CAP, Dust 11 9-0364 PIN, 5/32 x 1" Cotter Hair	1	5-2268	
2 2-3828 TIRE, Pneumatic 4.10/3.50 x 4 3 1-7146 RIM (For 4.10/3.50 x 4 Tire) 4 1-1807 BEARING, Ball 5 1-2234 VALVE, Air (Snap-in) 6 1-0138 FITTING Lube 7 1-0935 WASHER 8 1-1022 CAP, Hub 9 1-1032 SEAL, Felt 10 3-1038 CAP, Dust 11 9-0364 PIN, 5/32 x 1" Cotter Hair	-	5-2267	
3 1-7146 RIM (For 4.10/3.50 x 4 Tire) 4 1-1807 BEARING, Ball 5 1-2234 VALVE, Air (Snap-in) 6 1-0138 FITTING Lube 7 1-0935 WASHER 8 1-1022 CAP, Hub 9 1-1032 SEAL, Felt 10 3-1038 CAP, Dust 11 9-0364 PIN, 5/32 x 1" Cotter Hair	2	2-3828	
4 1-1807 BEARING, Ball 5 1-2234 VALVE, Air (Snap-in) 6 1-0138 FITTING Lube 7 1-0935 WASHER 8 1-1022 CAP, Hub 9 1-1032 SEAL, Felt 10 3-1038 CAP, Dust 11 9-0364 PIN, 5/32 x 1" Cotter Hair	3	1-7146	
6 1-0138 FITTING Lube 7 1-0935 WASHER 8 1-1022 CAP, Hub 9 1-1032 SEAL, Felt 10 3-1038 CAP, Dust 11 9-0364 PIN, 5/32 x 1" Cotter Hair	4	1-1807	,
6 1-0138 FITTING Lube 7 1-0935 WASHER 8 1-1022 CAP, Hub 9 1-1032 SEAL, Felt 10 3-1038 CAP, Dust 11 9-0364 PIN, 5/32 x 1" Cotter Hair	5	1-2234	VALVE, Air (Snap-in)
8 1-1022 CAP, Hub 9 1-1032 SEAL, Felt 10 3-1038 CAP, Dust 11 9-0364 PIN, 5/32 x 1" Cotter Hair	6	1-0138	
9 1-1032 SEAL, Felt 10 3-1038 CAP, Dust 11 9-0364 PIN, 5/32 x 1" Cotter Hair	7	1-0935	WASHER
10 3-1038 CAP, Dust 11 9-0364 PIN, 5/32 x 1" Cotter Hair	8	1-1022	CAP, Hub
11 9-0364 PIN, 5/32 x 1" Cotter Hair	9	1-1032	SEAL, Felt
	10	3-1038	CAP, Dust
12 1-0821 TUBE, Inner (For 4.10/3.50 x 4 Tire)	11	9-0364	PIN, 5/32 x 1" Cotter Hair
	12	1-0821	·

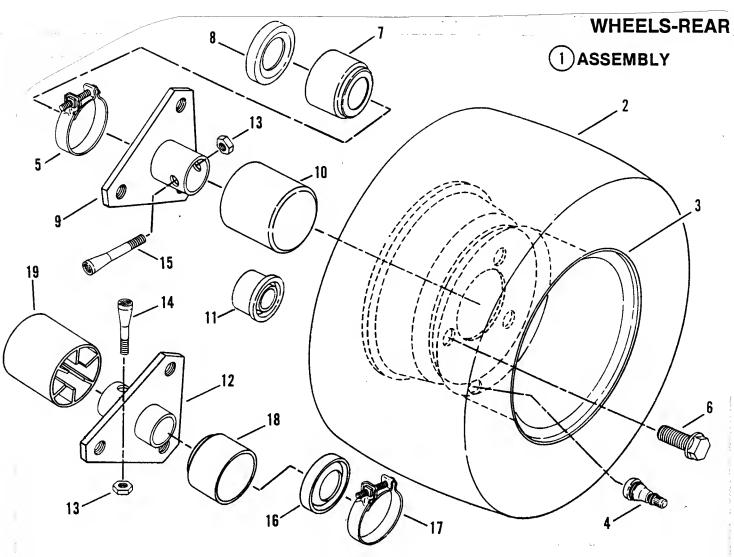

ITEM	PART NO.	DESCRIPTION
1	5-2269	ASSEMBLY, Rear Tire & Rim (Includes Items 2A, 3A, 4) (25" Models)
-	5-2270	ASSEMBLY, Rear Tire & Rim (Includes Items 2B, 3B, 4) (28" & 30" Models
-	5-2671	ASSEMBLY, Rear Tire & Rim (Includes Items 2C, 3C, 4) (33" Models)
2A	2-3889	TIRE, Std., 16-4.80 x 8 (25" Models)
2B	1-5968	TIRE, Wide, 16-6.50 x 8 (28" & 30" Models)
2C	2-2584	TIRE, Ext Wide, 16-7.50 x 8 (33" Models)
3A	1-2162	RIM, Std., (For 16-4.80 x 8 Tire) (25" Models)
3B	1-2163	RIM, Wide, (For 16-6.50 x 8 Tire) (28" & 30" Models)
3C	1-7145	RIM, Ext Wide, (For 16/7.50 x 8 Tire) (33" Models)
4	1-2234	VALVE, Air (Snap-in)
5	1-1037	CLAMP, Right Hand (8, 9 & 10 HP)
-	1-4542	CLAMP, Right Hand (12, 13, 14 HP)
6	9-1502	BOLT, 1/2-20 x 3/4" Lug (6)
7	3-1732	BOOT, Right Hand (8, 9 & 10 HP)
7A	1-4541	BOOT, Right Hand (12, 13, 14 HP)
8	1-1817	SEAL, Oil
9	4-0433	HUB, Rear Wheel (Right Hand)
10	2-3895	CAP, Hub
11	1-0967	CAP, Seal (Left Hand) (8 & 10 HP)
12	4-0434	HUB, Rear Wheel
13	1-1201	NUT, 5/16-24 Hex Center Lock
14	1-1035	BOLT, 5/16-24 x 1-5/8" Tapered (Left Hand)
15	1-1013	BOLT, 5/16-24 x 2" Tapered (Right Hand)
16	1-4662	SEAL, Oil (Left Hand)
17	1-2332	CLAMP, (Left Hand) (12, 13, 14 HP)
18	1-4658	BOOT, (Left Hand) (12, 13, 14 HP)
19	2-3522	CAP, Hub (Left Hand)

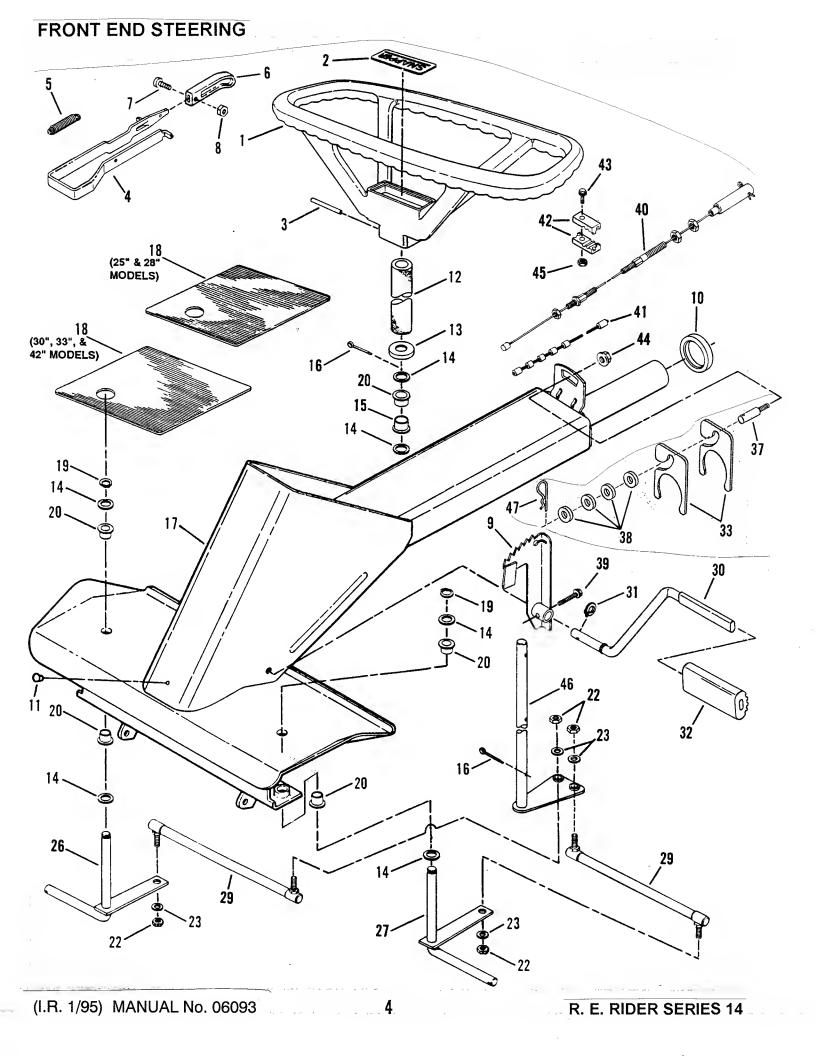


### FRONT END STEERING

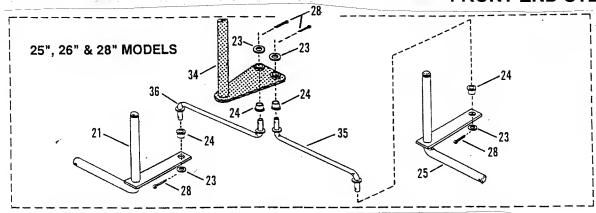


ITEM	PART NO.	DESCRIPTION
1	5-1941	ASSEMBLY, Steering Wheel (Includes Item 2)
2	2-3781	DECAL, Snapper
3	1-3862	PIN, 1/4 x 1-1/2" Roll
4	3-3882	DDAOVET OLI-L/D1
	2-3666	SPRING
6	2-3655	KNOB
5 6 7	9-1017	SCREW, #8-32 x 3/8" Cross Recess
8	9-1018	NUT, #8-32 Hex
9	4-1476	ARM, Clutch/Brake
10	2-2372	SPACER, Main Tube
11	1-6704	PLUG
12	2-3667	COVER, Steering Shaft (Foam)
13	2-3671	COVER
14	1-0935	WASHER, 3/4 Flat
15	1-9166	BUSHING, 3/4" Steering Shaft
16	9-1515	PIN, 3/16 x 1-1/2" Cotter (2)
17	4-1654	FRAME, Front (25" & 28" Models)
	4-1653	FRAME, Front (30" & 33" Models)
18	2-3660	PAD, Foot (Right Side Shown) (25" & 28" Models)
	2-3663	PAD, Foot (Right Side Shown) (30" & 33" Models)
	2-3659	PAD, Foot (Left Side) (25" & 28" Models) (Not Shown)
	2-3662	PAD, Foot (Left Side) (30" & 33" Models) (Not Shown)
19	1-0746	RING, Retaining (2)
20	1-0986	BEARING (5)
21	4-1688	PIN, Narrow King (Right Side)
22	9-1297	NUT, 5/16-24 Hex (4)
23	9-1315	WASHER, 5/16 Split Lock (4)
24	1-3321	BUSHING (4)
25	4-1687	PIN, Narrow King (Left Side)
26	4-1686	PIN, Wide King (Right Side)
27	4-1685	PIN, Wide King (Left Side)
28	9-1516	PIN, 5/32 x 1" Cotter (2)
29	2-4935	TIE-ROD (2) (30" & 33" Models)
30	2-4735	PEDAL, Clutch/Brake
31	1-0739	RING, Retaining
32	1-2661	PAD, Clutch/Brake Pedal
33	2-8395	SPACER, Pivot
34	4-1381	SHAFT, Steering (Narrow Front End)
35	2-4915	TIE-ROD, Left Side (25" & 28" Models)
36	2-4916	TIE-ROD, Right Side (25" & 28" Models)
37	2-8332	BOLT, 3/8-24 x 5/8" Hex Shoulder
38	2-2881	SPACER (2)
39	9-1151	SCREW, 5/16-18 x 1-1/4" Self-Tapping
40	2-2344	CABLE, Brake
41	2-9913	CABLE, Clutch
42	2-4284	UNION, Cable
43	9-1495	BOLT, 1/4-20 x 3/4" Hex Flange Lock
44	9-0962	NUT, 3/8-24 Hex Flange Lock
45	9-0372	NUT, 1/4-20 Hex Center Lock
46	4-1395	SHAFT, Steering (Wide Front End)
47	1-2867	PIN, 1/8 x 2-9/16" Hair
48	9-1514	WASHER, 3/8 Flat

### MAIN CASE

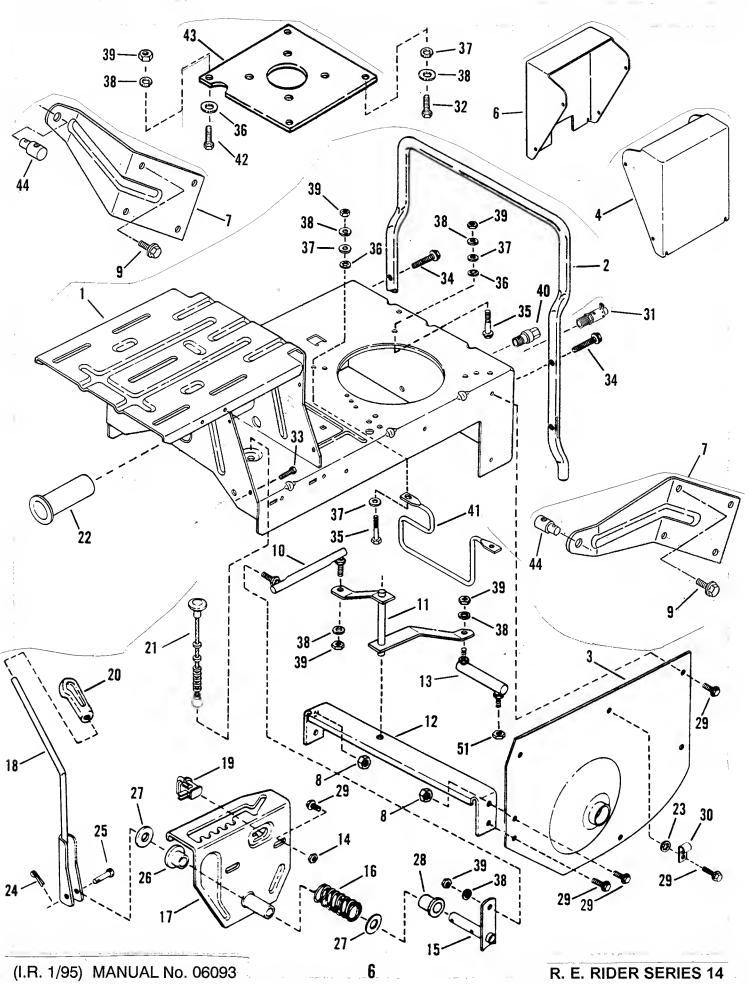


ITEM	PART NO.	DESCRIPTION		
1	4-1265	CASE, Main (Commercial)		
-	4-1263	CASE, Main (Standard)		
2	3-6367	BUMPER, Rear		
3	3-7958	FENDER, Left Hand (See page 10 for related parts)		
4	2-4319	COVER, Battery		
5	1-0969	NUT, 5/16-24 Hex Flange Lock		
6	1-7074	COVER, Switch		
7	3-4299	WING, Rear (Models 28", 30" & 33" Only)		
8	9-0585	NUT, 5/16-18 Hex Flange Lock (2)		
9	9-0793	SCREW, 5/16-18 x 3/4" Self-Tapping (4)		
10	2-3676	LINK, Shift (Long)		
11	4-1384	ARM, Shift		
12	3-3799	BRACE, Cross		
13	1-1018	LINK, Shift (Short)		
14	9-0196	NUT, 5/16-18 Hex (2)		
15	4-0598	ARM, Shift Handle		
16	1-0754	SPRING, Shift Handle		
17	4-1232	DETENT, Shift		
18	4-0599	HANDLE, Shift		
19	1-5707	SWITCH, Interlock		
20	2-3656	KNOB, Shift Handle		
21	2-7429	CABLE, Deck Support (25" Models Only)		
22	2-2509	BUSHING, Pilot		
23	9-0391	WASHER, 5/16 Internal Tooth Lock		
24 24	9-0037	PIN, 3/32 x 3/4" Cotter Hair		
25	2-3914	PIN, 1/4 x 1-3/4" Tapered Clevis		
25 26	1-9245	BUSHING, Nylon		
20 27	3-1036	WASHER, Thrust (2)		
28 20	1-9246	BUSHING, Nylon (2)		
29 20	9-0361	SCREW, 5/16-18 x 5/8" Self-Tapping (14)		
30	1-2652	CLIP, Wire		
31	2-7972	DRAIN, Oil (1/4 Turn)		
32	7-7692	SCREW,		
33	9-1272	FASTENER, 1/4 x 3/4 Ratchet (6)		
34	9-1506	SCREW, 5/16-18 x 1-1/2" Self-Tapping (4)		
35	9-1513	SCREW, 5/16-24 x 1-3/4" Hex Head Cap (4)		
36	1-1791	RETAINER, 5/16 Bolt (4)		
37	9-1296	WASHER, 5/16" Flat (4)		
38	9-1315	WASHER, 5/16" Split Lock (8)		
39	9-1297	NUT, 5/16-24 Hex (8)		
40	2-2486	DRAIN, Oil (Short)		
41	1-7653	GUIDE, Belt (25" & 28" Models)		
	1-7604	GUIDE, Belt (30" & 33" Briggs)		
42	9-0238	SCREW, 5/16-24 x 1" Hex Head Cap (4)		
43	3-4093	PLATE, Engine		
44		PLATE, Engine SWIVEL (2)		

### DIFFERENTIAL, R.H. FENDER

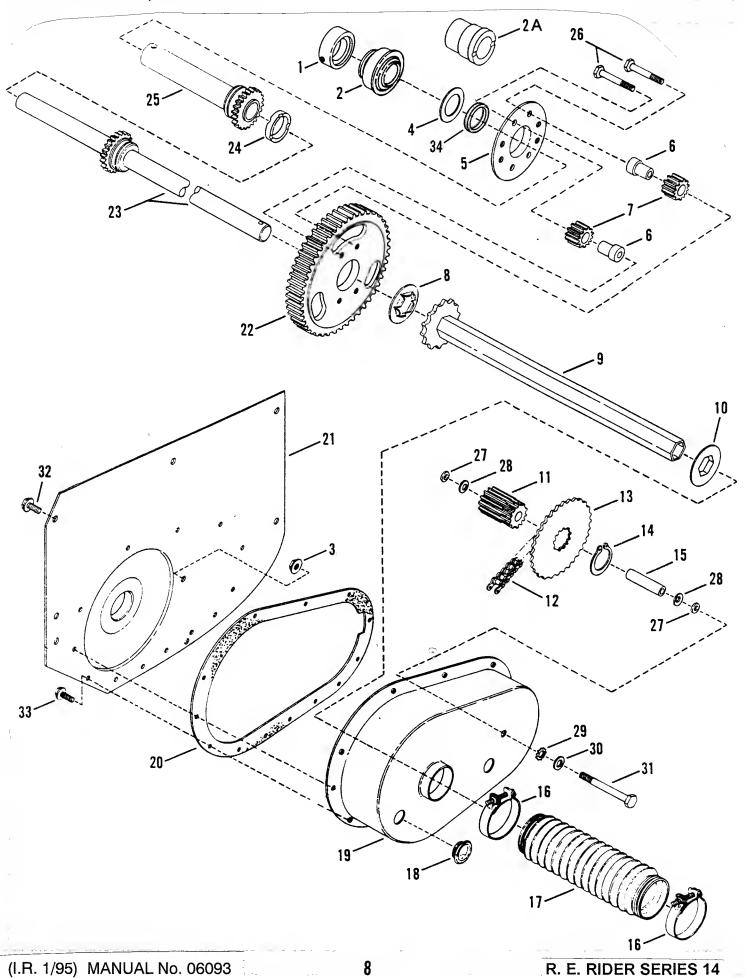



ITEM	PART NO.	DESCRIPTION
1	1-4401	COLLAR, Lock (Includes #9-0201 Set Screw)
2	1-8822	BALL BEARING, Axle (R. H. Fender) (10, 12, 13 & 14 HP Models)
2A	1-2296	BEARING, Axle (Right Hand Fender) (8, 9 & 10 HP Models)
3	1-0969	NUT, 5/16-24 Hex Flange Lock
4	3-1079	WASHER, Thrust
5	3-8067	PLATE, Differential
6	2-2115	SPACER, Pinion (4)
7	2-1127	GEARS, Differential Pinion
8	1-1072	WASHER, Thrust
9	5-1584	ASSEMBLY, Drive Hex Tube
10	1-0988	WASHER, Hex Insert
11	1-0964	GEAR, 11 Teeth-10 Pitch
12	1-0941	CHAIN, 46 Pitch (#35)
13	2-1129	SPROCKET
14	1-0965	RING, External Retaining
15	2-1128	SPACER
16	1-1037	CLAMP, Boot (2)
17	1-7083	BOOT, Oil Seal
18	1-1024	PLUG, Oil Fill & Check
19	3-7279	CASE, Transmission
20	1-8060	GASKET, Transmission Case
21	3-7957	FENDER, Right Hand (Commercial Models)
	3-7280	FENDER, Right Hand (Standard Models)
22	2-1158	GEAR, 63 Teeth-10 Pitch
23	4-7763	AXLE, Long (Includes Gear) (Use Only With Short Axle #5-7398)
24	1-1026	SPACER
25	5-7398	AXLE, Short (Includes Gear) (Use Only With Long Axle #4-7763)
26	1-2333	SCREW, 5/16-24 x 1-5/8" Hex Cap Special Lock (4)
27	1-1156	O-RING, 5/16 (2)
28	1-1782	WASHER, 5/16" Belleville (2)
29	9-0395	WASHER, 5/16" External Tooth Lock
30	9-0188	WASHER, 5/16" Flat
31	1-1042	BOLT, 5/16-24 x 2-5/8" Idler
32	9-0361	SCREW, 5/16-18 x 5/8" Self-Tapping (11)
33	9-0362	SCREW, 1/4-20 x 5/8" Self-Tapping (13)
34	3-2107	SPACER, Short Axle
	6-0411	KIT, Differential (Includes item 2A and Fender 3-7280)
	6-0662	KIT, Differential (Includes item 2 and Fender 3-7957)

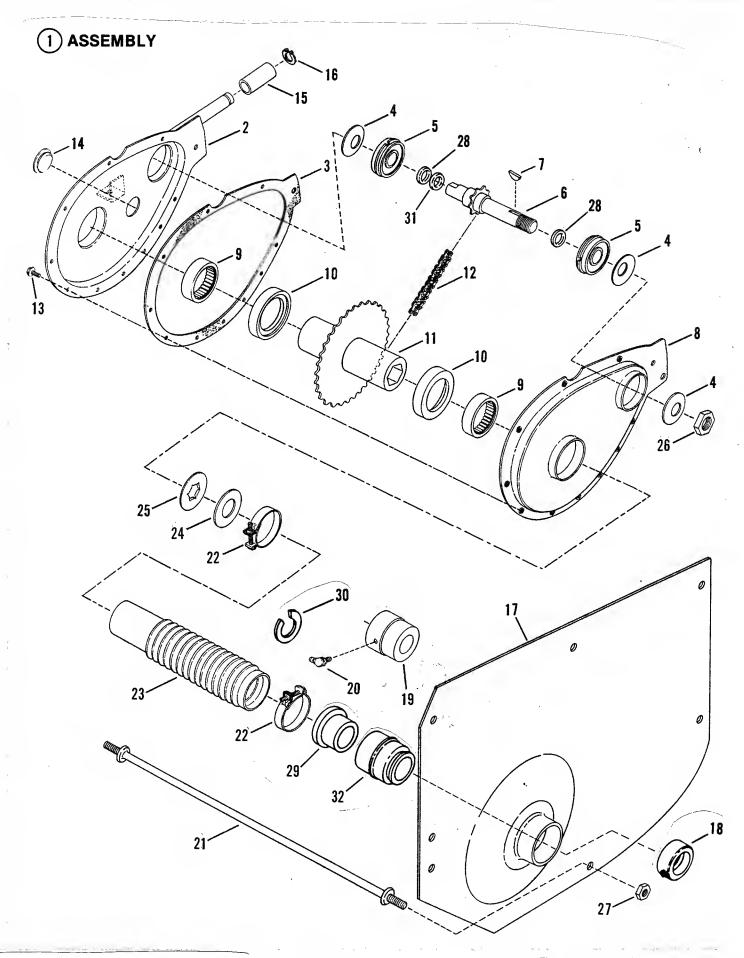


ITEM	PART NO.	DESCRIPTION
1	5-2683	ASSEMBLY, Chain Case
		(Includes Items 2 Thru 13,15,16,31 Thru 35)
2	4-1136	CASE, Sprocket
3	1-8059	GASKET, Case Cover
4	1-1121	WASHER, Belleville (2)
5	1-0756	BEARING, Ball (2)
6	1-8963	SPROCKET & SHAFT
7	1-0614	KEY, 1/8 x 5/8" Woodruff
8	3-9778	COVER, Chain Case
9	1-0942	BEARING, Needle (2)
10	1-1086	WASHER, Nylon Thrust (2)
11	4-0355	HUB & SPROCKET
12	1-0941	CHAIN
13	9-0307	SCREW, #10-24 x 5/8" Self-Tapping (10)
14	1-1024	PLUG, Oil Fill & Check
15	2-2785	ROLLER
16	1-0776	RING, Retaining
17	3-7285	FENDER, Left Hand (8, 10, 12 HP Models)
	3-7958	FENDER, Left Hand (12.5, 14, 16 HP Models)
18	1-4625	COLLAR, Lock (Includes #9-0776 Set Screw-1/4-20 x 1/4")
19	5-0918	BEARING, Left Hand Fender (Includes Item 20)
		(8, 10, 12 HP Models)
20	1-3324	FITTING, Lube
21	1-1070	ROD, Cross-Tie
22	1-1037	CLAMP, Boot (2)
23	1-7084	BOOT, Oil Seal
24	1-1071	WASHER, Thrust Nylon
25	1-1072	WASHER, Thrust
26	9-1505	NUT, 5/8-18 Hex Lock
27	1-0969	NUT, 5/16-24 Hex Flange Lock
28	1-9260	O-RING (2)
29	2-3447	SPACER
30	1-2271	WASHER, Shim (As Required)
31	2-7981	WASHER, Shim (6)
32	1-4624	BEARING, Left Hand Fender (12.5, 14, 16 HP Models)
	5-1451	ASSEMBLY, Left Hand Fender (Includes 3-7958 Fender & 1-4624 Bearing) (12.5, 14, 16 HP Models)

NOTE: See Pages 12 &13 For Illustration Of Brake Lever Assembly And Related Parts.

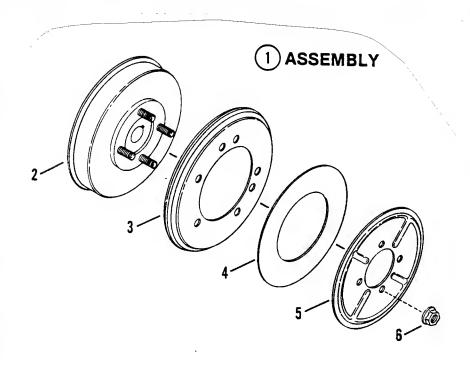

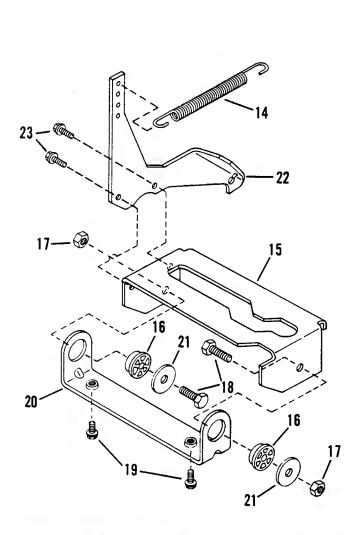

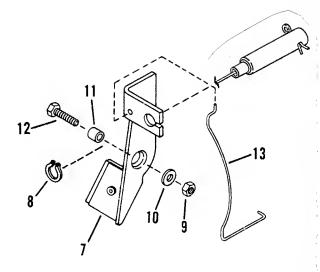

ITEM	DESCRIPTION	
1	5-3114	ASSEMBLY, Smooth Clutch (Includes Items 2 Thru 6)
2	5-7338	HUB, Driven Disc
3	5-3103	DISC, Driven
4	1-4523	WASHER, Thrust
5	3-2331	PLATE
6	9-0585	NUT, 5/16-18 Hex Flange Lock (4)
7	5-2497	ASSEMBLY, Brake Lever (Includes Brake Lining & Rivet)
8	1-2313	RING, Retaining
9	9-0303	NUT, 1/4-28 Hex Top Lock
10	9-1294	WASHER, 1/4 Flat
11	1-0916	SPACER
12	9-1504	SCREW, 1/4-28 x 1" Hex Head Cap
13	2-2371	SPRING, Brake Return
14	1-2264	SPRING, Clutch Brake
15	3-3292	LIFT, Yoke
16	1-1048	BEARING, Yoke (2)
17	1-1201	NUT, 5/16-24 Hex Center Lock (2)
18	9-0238	SCREW, 5/16-24 x 1" Hex Head Cap (2)
19	9-0506	SCREW, 3/8-16 x 1/2" Self-Tapping
20	3-3291	COLLAR, Yoke
21	1-1763	WASHER, 5/16 Flat (2)
22	3-3293	ARM, Yoke
23	9-1084	SCREW, 1/4-20 x 3/8" Self-Tapping (2)


# CUTTING DECKS, DEFLECTORS 24 31 RAILS & LIFT ARMS ASS'Y. (See Pages 18 & 19) 25 33 3,11 33 35 **39**. 22. 15 14 (I.R. 1/95) MANUAL No. 06093 R. E. RIDER SERIES 14

### **CUTTING DECKS, DEFLECTORS**

ITEM	PART NO.	DESCRIPTION
1	2-8994	COVER, Spindle
2	6-1221	25" DECK KIT
-	6-1223	28" DECK KIT
-	6-1224	30" DECK KIT
-	6-1225	33" DECK KIT
3	5-2555	DEFLECTOR, Discharge (28" & 33" Deck) (Includes Item 4)
4	1-3010	DECAL, Danger (Cut Finger)
5	3-9586	HINGE, Deflector
6	1-6341	SPRING, Hinge
7	2-6234	PIN, Hinge
8	9-1070	NUT, 5/16-18 Hex Flange Lock, Grade 5
9	1-6967	BLADE, 25" Mulcher
	1-6980	BLADE, 28" Mulcher
	1-6982	BLADE, 33" Mulcher
10	2-6483	NUT, Push (2)
11	5-1976	DEFLECTOR, Discharge (25" Deck) (Includes Item 4)
	5-7624	ASSEMBLY, Discharge (25" Deck) (Includes Items 4 Thru 9 & 11)
12	5-2553	DEFLECTOR, Discharge (30" Decks)
13	9-1296	WASHER, 5/16 Flat (2)
14	1-9518	25" BLADE
	1-9515	28" BLADE
	1-8069	30" BLADE
	1-9523	33" BLADE
15	6-0480	KIT, Air Lift (28", 33" Models) (Includes 16 Thru 19)
	6-0735	KIT, Air Lift (30" Models) (Includes 16 Thru 19)
16	3-7723	AIR-LIFT (2) (28", 33" Models)
	3-1724	AIR-LIFT (2) (30" Models)
17	9-0228	SCREW, 5/16-24 x 11/16" Machine (6)
18	9-0391	WASHER, 5/16" Internal Tooth Lock (6)
19	9-0223	NUT, 5/16-24 Hex (6)
20	9-0392	SCREW, 1/2-20 x 1" Hex Head Cap, Grade 5 (2)
21	9-0509	WASHER, 1/2" Internal Tooth Lock (2)
22	9-0559	NUT, 1/2-20 Hex Jam (2)
23	9-1508	BOLT, 5/16-18 x 3/4" Short Neck Carriage, Grade 5 (2)
24	9-1016	SCREW, 1/4-20 x 5/8" Self-Tapping (4)
25	9-1510	BOLT, 5/16-18 x 5/8" Hex Flange Lock, Grade 5 (3)
26	9-1525	BOLT, 5/16-18 x 1/2" Hex Flange Lock, Grade 5 (2)
27	9-0613	NUT, 3/18-16 Hex Flange Lock (9)
28	3-3570	BRACKET, Gage Wheel (Front)
29	9-1532	SCREW , 3/8-24 x 3-3/4" Hex Head Cap, Grade 5 (3)
30	1-9190	WHEEL, Gage (3)
31	1-5272	SPACER (3)
32	9-1518	NUT, 3/8-24 Hex Nyloc (3)
33	3-3571	BRACKET, Gage Wheel (Rear) (2)
34	9-0731	BOLT, 5/16-18 x 1/2" Short Neck Carriage, Grade 5 (6)
35	9-1070	NUT, 5/16-18 Hex Flange Lock, Grade 5 (8)
36	9-1015	SCREW, 1/4-20 x 3-1/2" Self-Tapping, Grade 5 (2)
37	9-0492	NUT, 5/16-18 Wing (2)
38	9-0612	BOLT, 3/8-16 3/4" Hex Flange Lock (3)
39	1-6968	COVER, 25" Mulcher
	1-6983	COVER, 28" Mulcher
	1-6984	COVER, 23 Mulcher
	1-0304	OOVER, 33 MUIGIEI


NOTE: ITEM #2: For complete assembly, use 6-1228 (28" REPLACEMENT DECK), 6-1229 (30" REPLACEMENT DECK) or 6-1230 (33" REPLACEMENT DECK). These decks are for series 10 thru 13, and therefore, for series 14, use the rear lift arm with which your mower is equipped.

RAILS, LIFT ARMS, CAM LIFT (25", 28", 30", 33" MODELS)

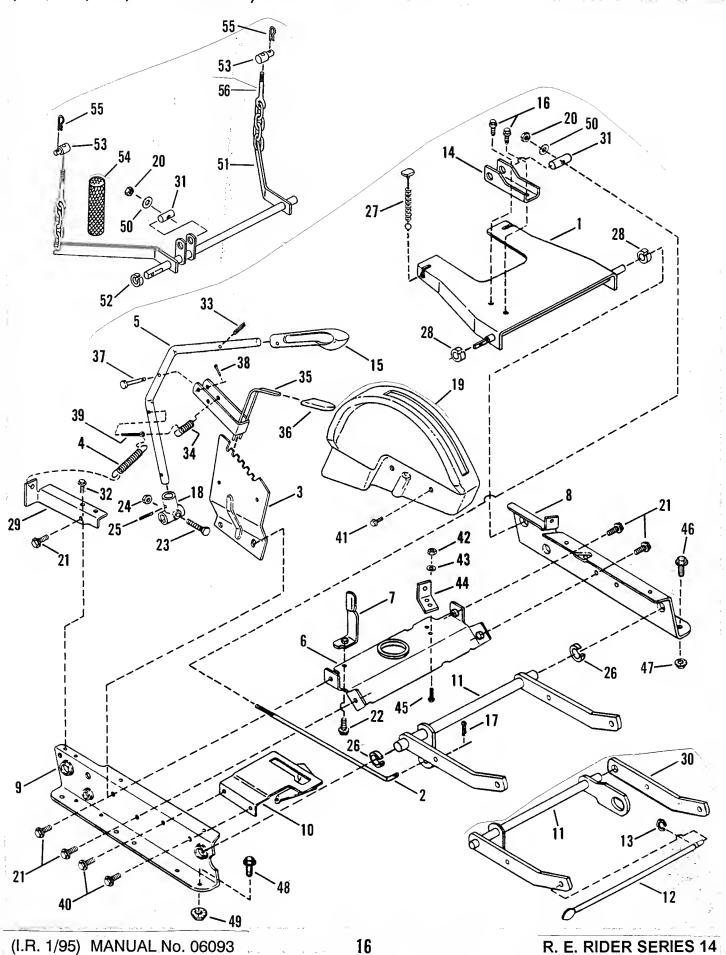



ITEM	PART NO.	DESCRIPTION		
1	4-1389	ARM, Rear Lift (25" Models Only)		
2	1-6122	ROD, Leveling		
3	3-3765	QUADRANT, Lift Lever		
4	2-4914	SPRING, Extension		
5	2-4878	LEVER, Lift		
6	3-1838	BRACE, Top		
7	3-1855	GUIDE, Belt		
8	3-4339	RAIL, Left Hand		
9	3-3766	RAIL, Right Hand		
10 11	5-1310	ASSEMBLY, Clutch Plate		
-	4-0684 4-0685	ARM, Front Lift, Non-Adjustable (25" & 28" Models		
- 12	2-2717	ARM, Front Lift, Adjustable (30", 33" Models) ROD, Support (Front Lift Arm to Front End)		
13	1-7847	RING, 7/16 Retaining		
14	3-3008	ARM, Leveling		
15	2-3658	GRIP, Height Adjustment Lever		
16	9-1001	SCREW, 5/16-18 x 5/8" Self-Tapping (Torx) (2)		
17	9-0365	PIN, 1/8 x 3/4" Cotter		
18	2-5049	HUB, Deck Lift		
19	2-6394	COVER, Height of Cut		
20	9-0854	NUT, 3/8-24 Hex Nyloc		
21	9-1198	SCREW, 3/8-16 x 5/8" Self-Tapping (6)		
22	9-0361	SCREW, 5/16-18 x 5/8" Self-Tapping		
23	9-1164	BOLT, 5/16-24 x 1-5/8" Tapered Axle		
24	9-0480	NUT, 5/16-24 Hex Flange Lock		
25	1-3550	PIN, 3/16 x 1" Roll		
26	1-2067	RING, Red (2)		
27	<b>2-</b> 7429	CABLE, Rear Deck		
28	2-2112	RING, White		
29	2-4762	BRACKET, Deck Lift (25" Models Only)		
	3-4307	BRACKET, Deck Lift (28", 30" & 33" Models)		
30	3-2997	ARM, Front Lift-Left (30" & 33" Models)		
31	2-2082	PIVOT, Leveling		
32	9-1084	SCREW, 1/4-20 x 3/8" Self-Tapping		
33	9-0844	PIN, 3/16 x 3/4" Roll		
34 35	2-6292 4-1470	SPRING, Latch		
36	<b>2</b> -6286	LATCH CRIR Lift Lateb		
36 37		GRIP, Lift Latch PIN, 1/4 x 1-1/4" Clevis		
38	1-1021 9-0360	PIN, 1/16 x 3/4" Cotter		
39	9-0753	PIN, 3/16 x 1 1/2" Cotter		
40	9-0858	SCREW, 5/16-18 x 1/2" Self-Tapping		
41	9-1016	SCREW, 1/4-20 x 5/8" Self-Tapping		
42	9-0223	NUT, 5/16-24 Hex (2)		
43	9-0321	WASHER, 5/16 Internal Tooth Lock (2)		
44	3-2243	ANCHOR		
45	9-0233	SCREW, 5/16-24 x 3/4" Hex Head Cap (2)		
46	9-0606	BOLT, 5/16-18 x 5/8" Hex Flange Lock		
47	9-0585	NUT, 5/16-18 Hex Flange Lock		
48	9-0584	· · · · · · · · · · · · · · · · · · ·		
49	9-0583			
50	9-0122	WASHER, 3/8 Flat		
51	4-1627	ARM, Rear Lift (28", 30" & 33" Models)		
52	1-2068	RING Blue		
53	2-8200	SWIVEL		
54	2-8021 COVER, Chain			
55				
56	2-8502	EYE BOLT		

# BELTS, BRAKES, INTERLOCK (25", 28", 30", 33" MODELS)

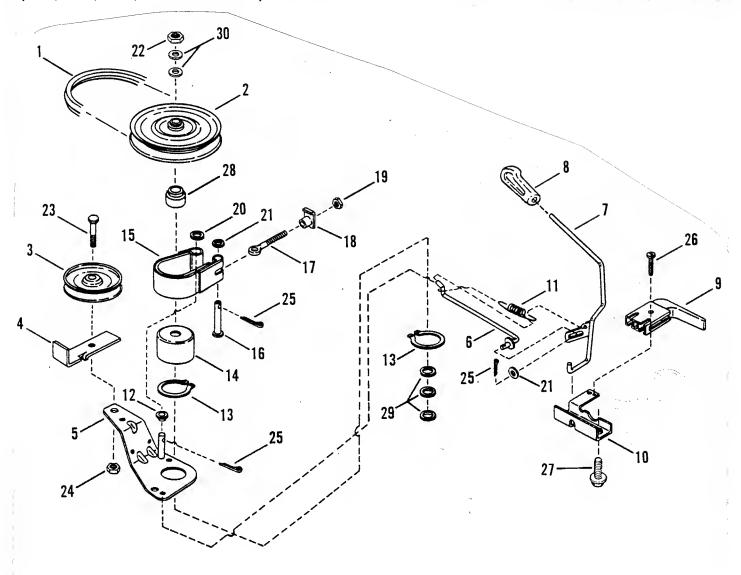


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	2-2252	BELT, Drive	16	1-4304	PIN, 1/4 x 1-5/8" Clevis
2	1-8781	PULLEY, Spindle	17	1-4302	BOLT, 1/4-20 x 2-7/8" Eye
3	2-9624	PULLEY, idler	18	1-4303	NUT, 1/4-20 Tee
4	3-2111	RESTRICTOR, Belt	19	9-0063	NUT, 1/4-20 Hex
. 5	4-7787	ARM, Idler	20	9-0122	WASHER, 3/8 Flat
6	1-2055	ROD, Idler	21	9-0055	WASHER, 1/4 Flat
7	4-1324	HANDLE, Blade Lever(On-Off)	22	1-0027	NUT, 3/4-16 Hex Jam
8	2-3657	GRIP, Handle	23	9-1517	SCREW, 3/8-24 x 1-3/4" Hex Cap
9	1-8524	SWITCH, Deck Interlock	24	9-1518	NUT, 3/8-24 Hex Lock
10	3-8021	MOUNT, Handle	25	9-0037	PIN, 3/32 x 3/4" Cotter (3)
11 →	1-4168	SPRING, Blade Handle	26	9-0299	SCREW, #10-32 x 1" Self-Tap
12	1-4314	SPACER	27	9-0362	SCREW, 1/4-20 x 5/8" Self-Tap
13	1-0740	RING, Retainer (2)	28	1-5290	HUB, Pulley
14	3-2169	DRUM, Brake	29	1-0935	WASHER, 49/64 x 1-1/8" Flat(3)
15	5-2886	BAND, Brake	30	3-2027	WASHER, 49/64 x 1-1/2" Flat (2)

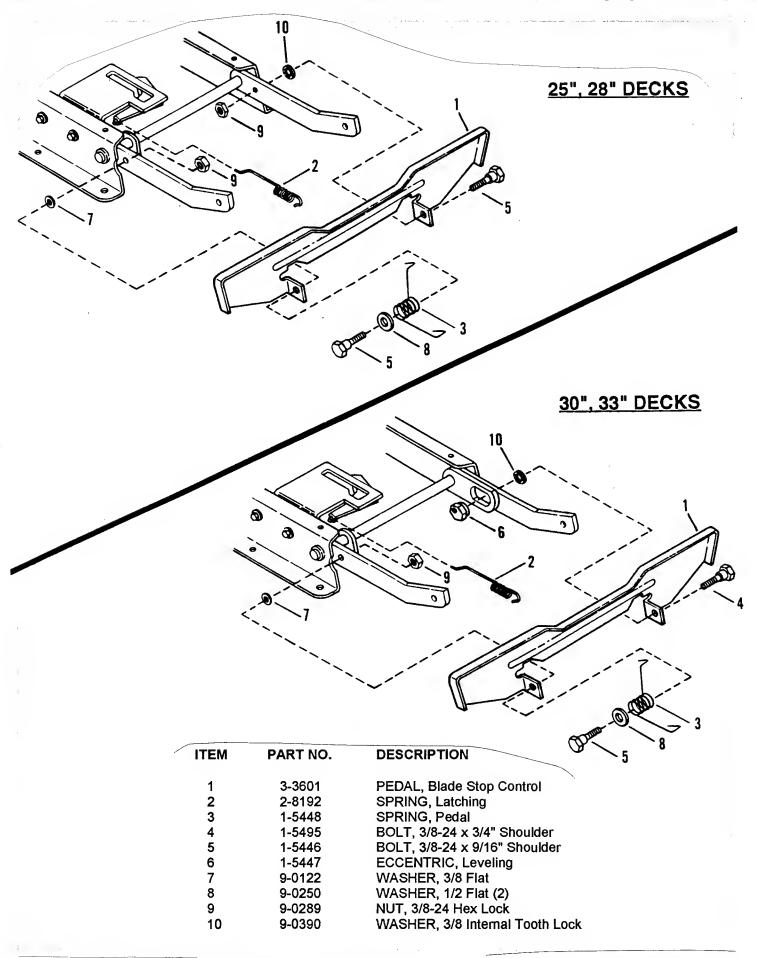

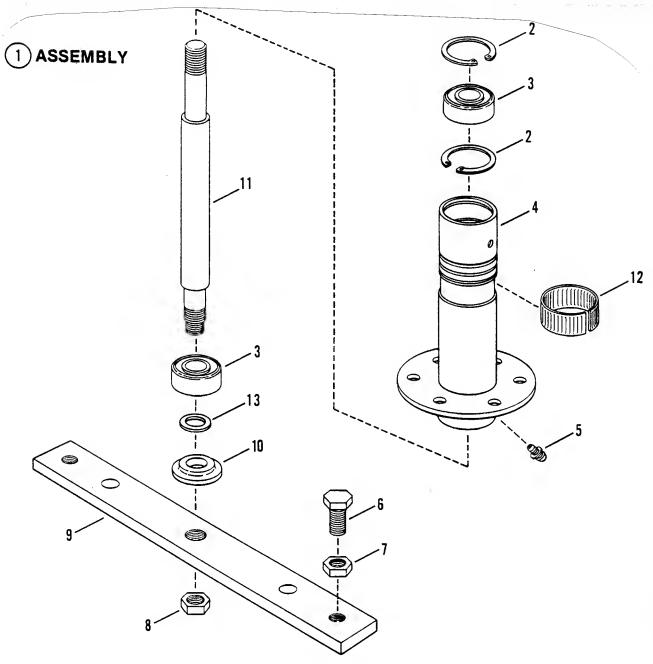


PART NO.	DESCRIPTION
5-9813	ASSEMBLY, Spindle Housing (Includes Items 2 Thru 11)
1-2491	RING, Retaining (2)
1-3313	BEARING, Spindle (2)
5-0696	HOUSING, Spindle (Includes Item 5)
1-0817	FITTING, Lube
9-0392	SCREW, 1/2-20 x 1" Hex Head Cap (2) (GR. 5)
9-0559	NUT, 1/2-20 Hex Jam (2)
9-0356	NUT, 5/8-18 Hex Lock
3-7751	HOLDER, Blade
1-4407	WASHER, Spindle
2-1742	SPINDLE
1-2670	RING, Tolerance
1-0121	WASHER, 3/4 Shim
	5-9813 1-2491 1-3313 5-0696 1-0817 9-0392 9-0559 9-0356 3-7751 1-4407 2-1742 1-2670

### **DRIVE DISC ASSEMBLY**

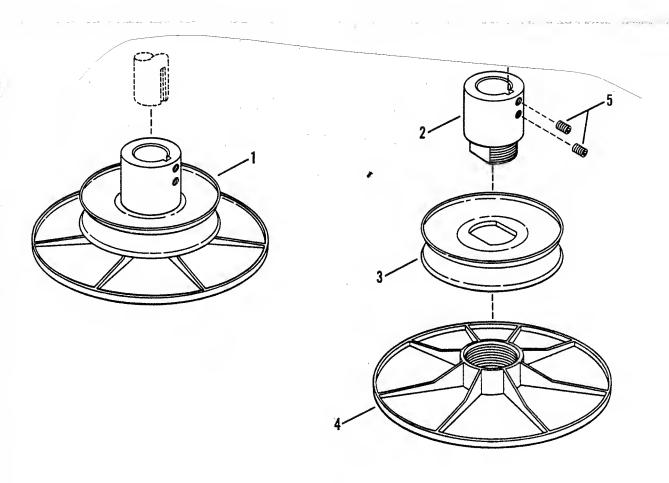



ITEM	PART NO.	DESCRIPTION
1	5-1502	ASSEMBLY, 4" O.D. Drive Disc (30" & 33" Models) (Includes Items 2 Thru 4)
•	5-1503	ASSEMBLY, 5" O.D. Drive Disc (25" & 28" Models) (Includes Items 2 Thru 4)
2	1-1001	HUB
3	1-0987	PULLEY, Drive (25" & 28" Models)
-	1-1002	PULLEY, Drive (30" & 33" Models)
4	1-1000	DISC, Drive
5	9-0132	SCREW, 3/8-16 x 3/8" Set (2)


### **FUEL TANK & OPERATORS SEAT**

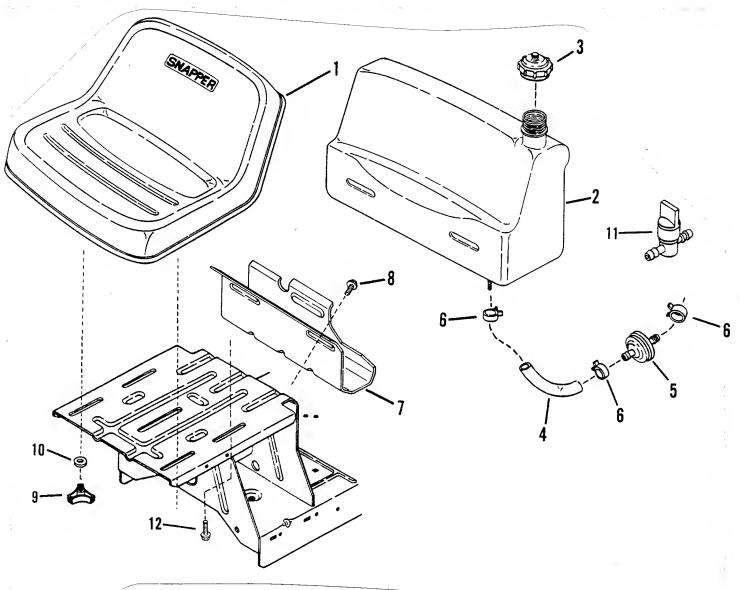


ITEM	PART NO.	DESCRIPTION
	•	
1	2-8333	SEAT, Operator (Low Back)
-	1-6082	SEAT, Operator (Mid Back)
-	2-2585	SEAT, Operator (Deluxe Back)
2	5-1905	ASSEMBLY, Fuel Tank (Includes Item 3)
3	1-2515	CAP, Fuel Tank
4	3-2015	HOSE, Fuel (7" Long)
-	3-2038	HOSE, Fuel (5" Long)
-	7-6272	HOSE, Fuel (8-1/2" Long)
-	1-2912	HOSE, Fuel (12-1/2" Long) (Kohler Only)
5	1-4359	FILTER, Fuel (In-Line)
6	1-2222	CLAMP, Fuel Line (4)
7	3-3377	BRACKET, Fuel Tank (Rear)
8	9-1542	SCREW, 5/16-18 x 5/8" Self-Tapping (2)
9	2-3191	KNOB, Seat Adjusting (2)
10	1-3849	SPACER, 5/16 (2)
11	2-4507	VALVE, Fuel Shut-Off (Accessory)
12	9-1038	BOLT, 5/16-18 x 1/2" Hex Flange Lock (2)

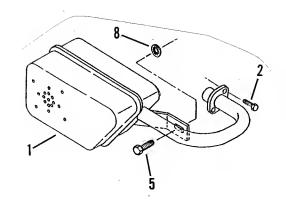

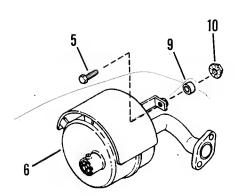

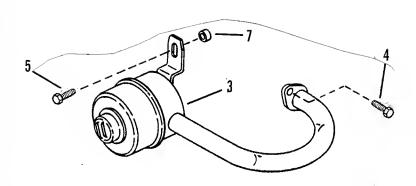


ITEM	PART NO.	DESCRIPTION
1	2-8358	MUFFLER (Briggs 8 HP Only)
2	2-7172	SCREW, 1/4-20 x 5/8" Hex Head Cap (2)
3	5-1996	MUFFLER (9 HP, 10 HP, 12 HP Briggs)
4	9-0206	SCREW, 5/16-18 x 3/4" Hex Head Cap (2)
5	9-1495	SCREW, 1/4-20 x 3/4" Hex Head Cap (12 HP Models)
	9-1127	SCREW, 1/4-20 x 7/8" Machine (10 HP Models)
6	1-9358	MUFFLER (Kohler 14 HP Only)
7	2-1866	SPACER (10 HP Models Only)
8	9-1314	WASHER, 1/4 Internal Tooth Lock
9	1-3849	SPACER
10	9-1070	NUT, 5/16-18 Hex Flange Lock

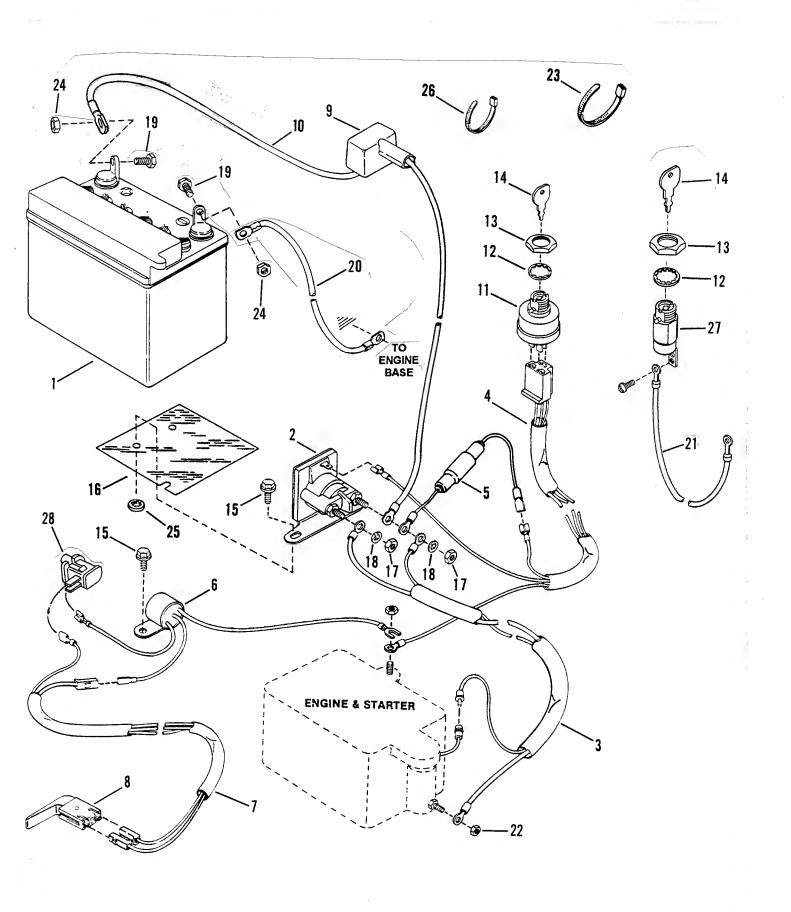



ITEM	PART NO.	DESCRIPTION
1	6-0753	KIT, 12V Dry Charge Battery
2	1-8817	SOLENOID
3	2-2788	HARNESS, Starter Wiring (Briggs)
	1-9321	HARNESS, Starter Wiring (Kohler)
4	1-9297	HARNESS, Ignition Wiring (Briggs)
-	1-9322	HARNESS, Ignition Wiring (Kohler)
5	1-6168	HOLDER, Fuse (Includes Fuse)
-	1-6169	FUSE (10 AMP)
6	2-3782	INTERLOCK (Briggs)
-	1-5759	INTERLOCK (Kohler)
7	2-8386	HARNESS, Deck Interlock Wiring
8	1-8524	SWITCH, Deck Interlock
9	1-2444	COVER, Battery Cable
10	1-9326	CABLE, Positive (Red)
11	2-2880	SWITCH, Ignition (Used With Electric Start
12	9-0880	WASHER, 5/8 Internal Tooth Lock
13	1-5438	NUT, 5/8-32 Hex
14	2-3504	KEY, Switch (2)
15	9-0539	SCREW, 1/4-20 x 1/2" Self-Tapping (3)
16	2-2887	PROTECTOR, Solenoid
17	9-0063	NUT, 1/4-20 Hex (4)
18	9-0053	WASHER, 1/4 Internal Tooth Lock (2)
19	2-7172	SCREW, 1/4-20 x 5/8" Hex Head Cap (2)
20	2-8027	CABLE, Negative
21	1-9299	WIRE, Ground (Manual Start)
22	9-1576	NUT, 1/4-20 Hex
23	1-2080	TIE, 7" Long Cable (2)
24	9-0372	NUT, 1/4-20 Hex Lock (2)
25	1-2485	RETAINER, 1/4 Bolt (2)
26	1-4451	TIE, 2" Long Cable
27	1-1853	SWITCH, Manual Start (Recoil)
28	1-5707	SWITCH Detent

### THROTTLE CONTROL

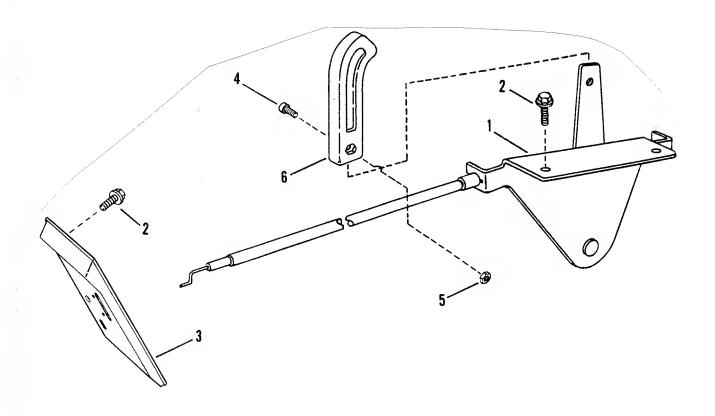

ITEM	PART NO.	DESCRIPTION
1	2-4155	CONTROL, Throttle
-	2-2483	CONTROL, Throttle (14 HP Kohler)
2	9-0913	SCREW, #10-24 x 1/2" Self-Tapping (Torx) (5)
3	2-3665	COVER, Dash Panel (Manual Start)
-	2-3680	COVER, Dash Panel (Electric Start)
4	9-1017	SCREW, #8-32 x 3/8" Cross Recess Filister (2)
5	9-1018	NUT, #8-32 Hex (2)
6	2-3655	KNOB, Throttle Control

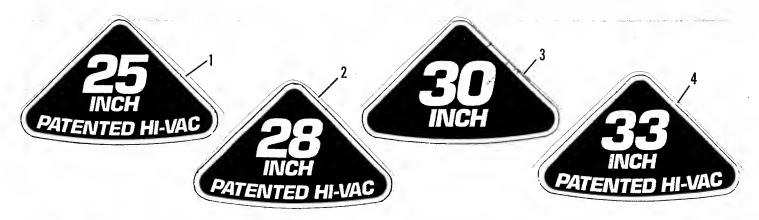

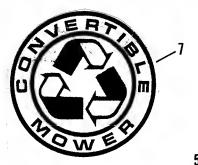



REMOVE BATTERY BEFORE STANDING MOWER ON END FOR MORE THAN 2 HOURS

TURN OFF FUEL
BEFORE STANDING
ON END




6



ITEM	PART NO.	DESCRIPTION
1	2-3992	DECAL, 25 Inch
2	2-3996	DECAL, 28 Inch
3	2-3997	DECAL, 30 Inch
4	2-2991	DECAL, 33 Inch
5	1-2358	DECAL, Battery
6	1-6974	SNAPPER, (Molded Logo)
7	3-4134	LOGO, Convertible (Silver) (25" Models)
	2-4068	LOGO, Convertible (Teal) (28" Models)
	2-4067	LOGO, Convertible (Blue) (33" Models)
8	2-4506	DECAL, Fuel Shut-Off
9	2-6419	DECAL, Height of Cut
10	2-3980	DECAL, Back-Up Recoil (30" & 33" Kohler Models)
11	2-3982	DECAL, OHV (30" & 33" Kohler Models)



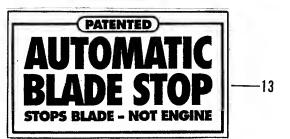



### **AVOID SERIOUS INJURY OR DEATH**

- READ ALL MANUALS AND INSTRUCTIONS FURNISHED WITH THE MACHINE.
- MAKE SURE THAT SHIELDS, GUARDS, SWITCHES, AND OTHER SAFETY DEVICES ARE IN PROPER POSITION AND FUNCTIONAL.
- CLEAR MOWING AREA OF WIRE, ROCKS AND OTHER OBJECTS THAT COULD CAUSE INJURY IF THROWN BY BLADE.
- DO NOT ALLOW CHILDREN (PRE-TEENAGERS) ON MACHINE (EVEN WITH BLADE OFF) OR IN YARD WHEN MOWING. KEEP OTHERS SAFELY AWAY FROM THE OPERATING AREA.
- LOOK DOWN AND BEHIND MACHINE BEFORE AND WHILE BACKING.
- DO NOT MOW ON SLOPES, OR ANY AREA WHERE STABILITY OR TRACTION IS IN DOUBT. IF YOU CAN NOT BACK-UP A SLOPE, DO NOT MOW ON IT.
- DO NOT MOW ACROSS FACE OF SLOPES. REDUCE SPEED AND AVOID SHARP TURNS ON SLOPES.
- AVOID UPHILL STARTS, IF THE MACHINE IS STOPPED GOING UP A SLOPE, TURN BLADE OFF AND BACK DOWN THE SLOPE.
- STOP BLADE BEFORE PUTTING FOOT ON GROUND OF LEAVING THE SEAT.

2

### A CAUTION A

DEFLECTOR MUST BE FASTENED DOWN OR GRASS CATCHER INSTALLED BEFORE OPERATING MOWER

# **A** CAUTION **A**

15

16

18-

ROTATING BLADES.
KEEP HANDS AND FEET
FROM UNDER MOWER.

1-6073



## A CAUTION

POSITIVE (+) BATTERY POST MUST BE TO REAR TO PREVENT ARCING AND POSSIBLE EXPLOSION OR FIRE.

USE ONLY SNAPPER REPLACEMENT BATTERY TO AVOID ACID DAMAGE.

TO TIGHTEN BELT AND ACHIEVE THE CORRECT
BELT SPAIN: REMOVE THE HAIRPIN AND DD
PLASTIC: SPACERS AS RECURED BETWEN
REAR FRAME AND FRONT FRAME. USE AS
MANY METAL SPACERS AS NECESSARY TO
TAKE UP SLACK AND REINSTALL THE HAIRPIN.

SPACER
(METAL)
FRONT
FRAME

FRAME

FORWARD

1° TO 11/2° CLEARANCE
WITH BLADE ENGAGEO.
NOTE! TO BE CHECKED
WITH BLADE ENGAGEO.
WITH ENGINE OFF.

2 9594

ITEM	PART NO.	DESCRIPTION
12	2-3983	DECAL, 14 HP (30" & 33" Kohler Models)
13	2-4072	DECAL, Auto Blade Stop
14	2-2448	DECAL, Safety Instruction Warning
15	1-6972	DECAL, Caution Deflector
16	1-6973	DECAL, Caution Rotating Blades
17	1-3010	DECAL, Danger
18	1-5691	DECAL, Caution Battery
19	2-9594	DECAL, Belt Adjustment
*	2-8697	DECAL, SR825
*	2-9669	DECAL, SR928
*	2-9670	DECAL, SR930
*	2-7777	LOGO, SR1028 (Molded Logo)
*	2-7779	LOGO, SR1030 (Molded Logo)
*	2-7780	LOGO, SR1230 (Molded Logo)
*	2-7788	LOGO, SR1333 (Molded Logo)
*	2-7782	LOGO, SR1433 (Molded Logo)
*	2-4042	DECAL, Banner Stripe (Silver) (25" Models)
*	2-4043	DECAL, Banner Stripe (Teal) (28" Models)
*	2-4045	DECAL, Banner Stripe (Blue) (30" Models)
*	2-4001	DECAL, Bumper Stripe (Silver) (25" Models)
*	2-3998	DECAL, Bumper Stripe (Teal) (28" Models)
*	2-4002	DECAL, Bumper Stripe (Teal) (30" Models)
*	2-4004	DECAL, Bumper Stripe (Blue) (30" Kohler & 33" Models)

\*NOTE: These items not shown. The description is the visual identification.

### **ENGINES**

ENGINE H.P.	<b>MANUFACTURER</b>	MODEL	TYPE
8.0	BRIGGS	195702	0142
8.0	BRIGGS	195707	0145
9.0	BRIGGS	28A707	0122
10.0	BRIGGS	28A707	0122
12.0	BRIGGS	283707	0136
13.0	BRIGGS	28M707	0112
14.0	KOHLER	CV14ST	PS-1469

### **SNAPPER REAR ENGINE RIDER ACCESSORIES**

PART NO.	DESCRIPTION OF KIT	MODELS USED ON
6.0517	Wheel Weight (8" Wheels)	All Page Engine Bidge
	Smooth Start Clutch	
	Dump Cart	
	Gauge Wheel	
	Gauge Wheel	
6-0941	Single Bag Catcher	All 25" Deck Rear Engine Riders
6-0942	Single Bag Catcher	All 26" & 30" Deck Rear Engine Riders
6-0943	Single Bag Catcher	All 28" & 33" Deck Rear Engine Riders
	Single Bag Catcher	
	Twin Bag Catcher	
	Twin Bag Catcher	
	Bag-N-Wagon	
	Thatcherizer	
6-0964	Wagon Cover	All 28" & 33" Deck Rear Engine Riders
6-1190	Weight (Front)	All Series 7 & Newer Riders
6-0959	Dozer Blade (36" Blade)	All Rear Engine Riders
6-0357	Tire Chains (Tires-16 x 6.50-8)	All Rear Engine Riders
6-0357	Tire Chains (Tires-16 x 4.80-8)	All Rear Engine Riders
6-1049	Ninja Recycling (Cover)	All 25" Deck Rear Engine Riders
6-1253	Ninja Recycling (Cover)	All 28" Deck Rear Engine Riders
6-1254	Ninja Recycling (Cover)	All 30" Deck Rear Engine Riders
6-1255	Ninja Recycling (Cover)	All 33" Deck Rear Engine Riders
6-1220	Ninja Recycling (Cover)	All 41" & 42" Deck Rear Engine Riders

# 

### **2 YEAR LIMITED WARRANTY**

For two (2) years from purchase date for the original purchaser's residential, non-commercial use, SNAPPER through any SNAPPER dealer will replace, free of charge (except for taxes where applicable), any part or parts found upon examination by the factory at McDonough, Georgia, to be defective in material or workmanship or both.

For ninety (90) days from purchase date for the original purchaser's commercial, rental, or other non-residential use, SNAPPER, through any SNAPPER dealer will replace, free of charge, any part or parts found upon examination by the factory at McDonough, Georgia, to be defective in material or workmanship or both.

All transportation costs incurred by the purchaser in submitting material to a SNAPPER dealer for replacement under this warranty must be paid by the purchaser.

This warranty does not apply to engines and their components, hydro transmissions, gear drive transmissions and batteries, as these items are warranted separately. This warranty does not apply to parts that have been damaged by accident, alteration, abuse, improper lubrication, normal wear, or other cause beyond our control.

There is no other express warranty.

Implied warranties, including those of merchantability and fitness for a particular purpose, are limited to two (2) years from purchase date for the original purchaser's residential, non-commercial use [ninety (90) days from purchase for the original purchaser's commercial, rental or other non-residential use], and to the extent permitted by law, any and all implied warranties are excluded. This is the exclusive remedy. Liabilities for consequential damages, under any and all warranties are excluded.

Some states do not allow limitations on how long an implied warranty lasts, or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

WARNING: THE USE OF REPLACEMENT PARTS OTHER THAN GENUINE SNAPPER PARTS MAY IMPAIR THE SAFETY OF SNAPPER PRODUCTS AND WILL VOID ANY LIABILITY AND WARRANTY BY SNAPPER ASSOCIATED WITH THE USE OF SUCH PARTS.

> IMPORTANT: Please fill out the attached SNAPPER Product Registration Card immediately and mail to: SNAPPER, McDONOUGH, GEORGIA 30253

# SMAPPER

# REAR ENGINE RIDER SERIES 14

**MODELS** 

250814B

250814BE

280914BE

281014BE

300914BE

301014BE

301214BE

331314BE

331414KVE